


Brake fluid Exchanger Parts List


| Item | Description | Qty | Item | Description | Qty |
|------|------------------------|-----|------|----------------------------|-----|
| 1 | Handle Bar | 1 | 11 | Connector | 2 |
| 2 | Cap, Tank | 1 | 12 | Valve, Safety, Air Release | 1 |
| 3 | Tank, Upper Half | 1 | 13 | Connector | 1 |
| 4 | Rubber Membrane | 1 | 14 | Tube | 1 |
| 5 | Tank, lower Half | 1 | 15 | Connector, Quick Fluid | 1 |
| 6 | Connector, PL802L | 1 | 16 | Hose, Fluid | 1 |
| 7 | Hose, Air Inlet | 1 | 17 | Strain Relief, Hose | 1 |
| 8 | Connector, Quick | 1 | 18 | Coupler | 1 |
| 9 | Valve, Ball, 1/4" | 3 | 19 | Gauge, Pressure | 1 |
| 10 | Valve, Pressure Adjust | 1 | 20 | Coupler, Pressure Gauge | 1 |

NOTE: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

Brake Fluid Exchanger Assembly Drawing

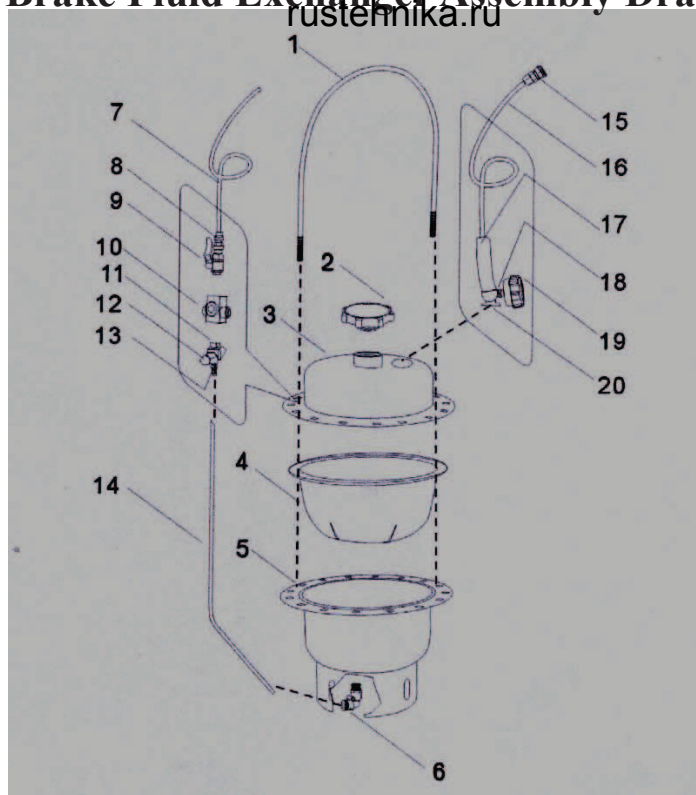

Adapter Kit Parts List

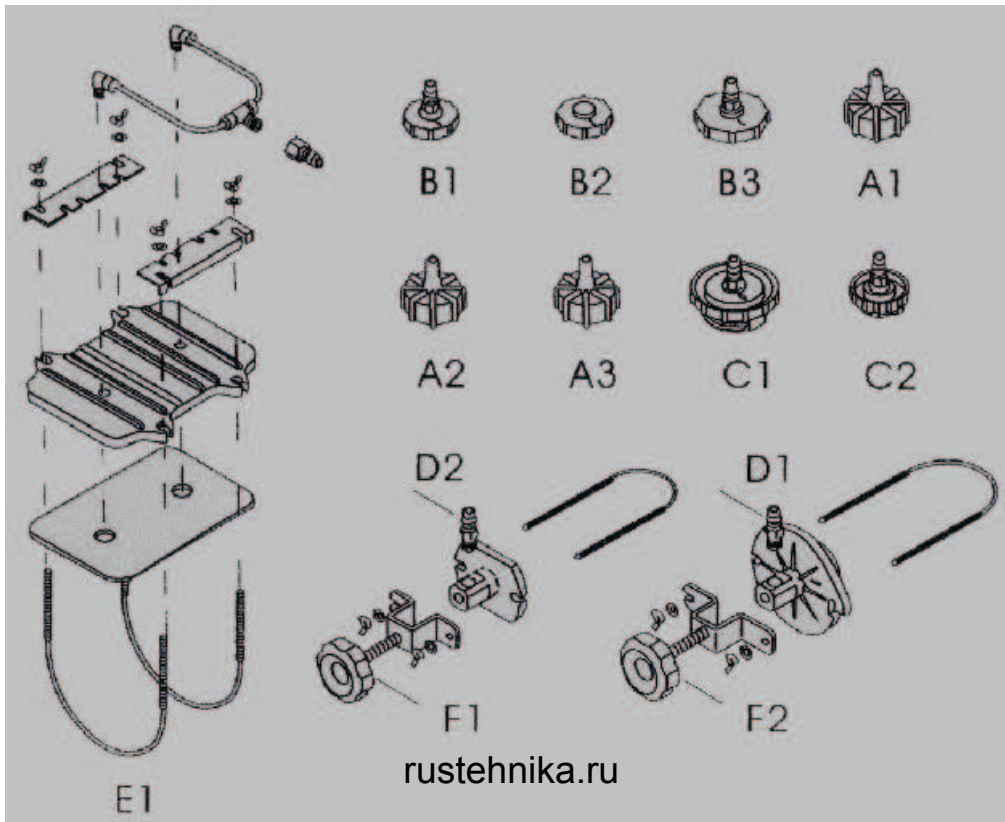

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.