

All rights reserved! Any company or individual person shall not copy or backup this user manual in any format (electronic, mechanical, photocopying, recording or other formats) without written permission from Launch Tech Co., Ltd (hereinafter referred to as "Launch"). The manual is for the use of the products manufactured by Launch, which shall not assume any responsibility for the consequences arising from the use of it to guide the operations of other equipment.

Launch and its branches will not bear any liability for the fees and expenses incurred by equipment damage or loss due to accidents caused by users or third parties, misuses and abuses, unauthorized modifications and repairs, or operations and services not following launch's instructions.

Launch assumes no responsibility for device damages or problems resulted from the usage of other parts or consumables, rather than original products of launch or products approved by the company.

Official statement: the mentioning of the names of other products in this manual is to illustrate how to use the device, with the ownership of the registered trademarks belonging to the owners.

The device is intended for the use of professional technicians or maintenance and repair personnel.

Registered Trademark

Launch has registered its trademark in china and several other countries, and the logo is **LAUNCH**. Other trademarks, service marks, dot names, icons, company names of launch mentioned in the user manual all belong to launch and its subsidiaries. In those countries where trademarks, service marks, dot names, icons, company names of launch have not been registered yet, launch declaims the right for its unregistered trademarks, service marks, dot names, icons, and company names. Trademarks of other products and company names mentioned in this manual are still owned by the original registered companies. Without written agreement from the owner, no person is allowed to use the trademarks, service marks, domain names, icons and company names of Launch or of other mentioned companies. You can visit <https://www.cnlaunch.com>, or write to Customer Service Center of Launch Tech Co., Ltd at Launch Industrial Park, North of Wuhe Road, Bantian Street, Longgang District, Shenzhen City, Guangdong Province, P.R.China, to get contact with Launch for the written agreement on the usage of the user manual.

Disclaimer of Warranties and Limitation of Liabilities

All information, illustrations, and specifications in this manual are based on the latest information available at the time of publication.

The right is reserved to make changes at any time without notice. We shall not be liable for any direct, special, incidental, indirect damages or any economic consequential damages (including the loss of profits) due to the use of the document.

Contents

1. Product Overview	1
2. Precautions for Safe Use	1
3. Packing list	1
4. Technical Features	1
5. Operating Instructions	3
5.1 Panel Description	3
5.2 Device Connection	5
5.3 Main Unit Operation	6
5.3.1 Main Menu	6
5.3.2 Balanced Maintenance	6
5.3.3 Data Analysis	9
5.3.4 Data Export	10
5.3.5 System Setting	11

1. Product Overview

EVB624 Battery Pack Module Wireless Equaliser is a split equalization maintenance device developed by Launch, which is designed based on the charge and discharge characteristics of lithium batteries. It can effectively repair the problem of battery performance degradation, which caused by excessive pressure difference of single battery. The charger and wireless discharge module of the equaliser use split design, which are communicated through wireless networking, and maximum configuration 6 wireless discharge modules (24 channels). The 10.1-inch touch screen is easy to operate and visualizes information of battery, such as voltage, current, status, capacity, etc. The wireless equaliser supports three modes: equilibrium, discharge and charge, it can automatically save historical equilibrium data records and supports data USB disk export. Suitable for lithium iron phosphate, ternary lithium, Lithium manganate and other common lithium battery type.

2. Precautions for Safe Use

- (1) Please follow the user manual to use this device.
- (2) Please wear dry and clean insulating gloves when operating device.
- (3) Please use the outlet and cable comply with 16A standard.
- (4) Please disconnect the device power supply and test cables when happened emergency.

3. Packing list

The product includes charger(main unit), wireless discharge module, AC power cord, DC high-voltage output cable, equalizer test cable, temperature acquisition cable, etc. Please refer to the actual packing list delivered with the package.

4. Technical Features

Charger parameter	
Model	EVB624
Power input	AC 90~264V 50/60Hz
Voltage range	DC 0~112V
Voltage accuracy	$\leq \pm 1\%$ @48~112V DC; $\leq \pm 0.5V$ @10~48V DC
Current range	1~40A
Current accuracy	$\leq \pm 1\%$ @Output \geq 4A
Single device supports number of discharge module	Support up to 6 wireless discharge modules(24 channels)
Power	3200W
Display	10.1-inch touch screen


Data communication	Wi-Fi; Bluetooth
Data Storage	32G
Data dump	U disk
Main unit protection	Over voltage, Under voltage, Over current, Power-down, Over temperature, Reverse connection protection
Cooling	Fan
Temperature	Operating temperature range: -10-50 °C; storage temperature: -20~70°C
Environment Humidity	Related humidity 5%-90% RH
Dimension	381.0*270.0*275.0mm

Wireless Discharge module parameter	
Power input	5V 2A
Discharging voltage range	DC 2.8~4.2V
Discharging voltage accuracy	$\pm(0.1\%FS+5mV)$ (Max.range 5V)
Discharging Current range	1~10A(single channel)
Discharging Current accuracy	$\pm 1\%FS$ (Max.range 10A)
Single discharge module supports number of cell	4
Power	Maximum 42W for single channel; 168W for four channels
Data Export	Wi-Fi; Bluetooth
Main unit protection	Over current, Over temperature, Reverse connection protection
Cooling	Fan
Temperature	Operating temperature range: -10-50 °C; Storage temperature: -20~70°C
Environment Humidity	Related humidity 5%-90% RH
Dimension	215.0*100.0*130.0mm

5. Operating Instructions


5.1 Panel Description

Charger:

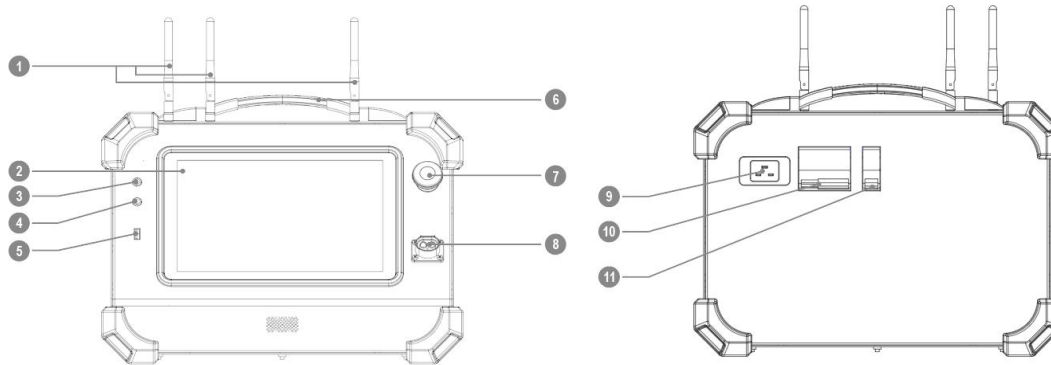

No.	Name	Description
1	Antenna	Used to communication and networking.
2	Screen	10.1-inch touch screen.
3	POWER	Power indicator: ①In the equilibrium mode---the cell discharging , the red light always on. ②In the equilibrium mode---the cell charging, the red light flashes. ③In discharge mode, the red light always on. ④In charge mod, the red light flashes.
4	COMM	Communication indicator: ①After the device turned on, the blue light always on. ②When the device is communicating, the blue flashes.
5	I/O Port	Export to USB.
6	Handle	Easy to carry device.
7	Emergency Stop Switch	Device stop working when emergency stop switch is pressed; reset switch to start device after troubleshooting. Device startup needs to close AC switch again.
8	DC High-Voltage Output Port	Control host output DC current .
9	Power Switch	Power input.
10	AC Input Circuit breaker	Control charger input AC current.
11	DC Output Circuit breaker	Control charger output DC current.

Wireless Discharge module:

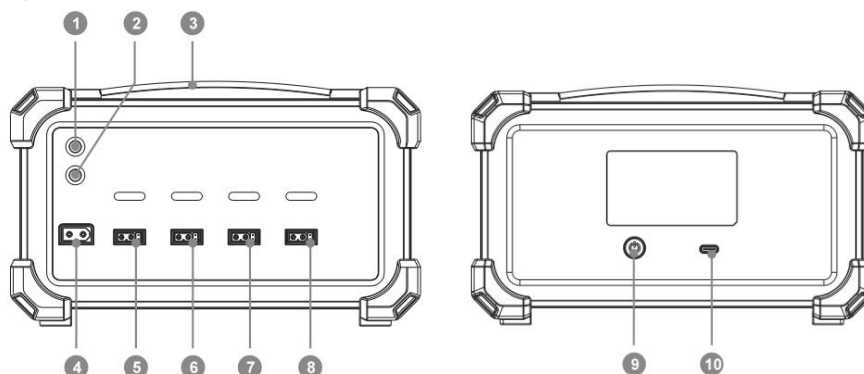

No.	Name	Description
1	POWER	Power indicator: ①After the device is turned on, the red light always on. ② The red light flashes when power supply is below 30%.
2	COMM	Communication indicator: ①After the device turned on, the blue light not on. ②Double-click power switch to enter blue tooth communication mode, the blue light flashes quickly. ③After communicated with charger, the blue light flashes slowly.
3	Handle	Easy to move device.
4	Temperature test Terminal	Connect temperature test cable.
5	Equalizing test terminals #1	Connect equalizing cable.
6	Equalizing test terminals #2	Connect equalizing cable.
7	Equalizing test terminals #3	Connect equalizing cable.
8	Equalizing test terminals #4	Connect equalizing cable.
9	Power Switch	Device turn on/off: ①Long press power switch to turn on/off. ②Double-click power switch to enter network communication mode with charger.
10	USB Type-C Port	Connect supply adapter to charge for discharge module.

5.2 Device Connection

Step1: First, connect the plug of DC high-voltage output cable into the high-voltage output port of the charger, and then connect the positive and negative output cable of DC high-voltage cable to the positive and negative terminals of the battery pack respectively (the red cable is the positive, the black cable is the negative).

Step2: Connecting one end of the AC power cord to the power supply port of the charger and the other end to AC power.

Step3: The device turns on when closed the AC breaker.

Step4: Long press the power button on the back of the wireless discharge module to turn it on, double press the power button and enter the networking mode when the blue light blinks to pair with the charger.

Step5:


1) Connect the connector end of equalizer test cable to the channel #1 of the discharge, the other end of equalizer test cable are connected to the positive and negative of the battery cell respectively (the red clip is the positive cable, the black clip is the negative cable).The light indicator above the channel #1 is on, it means that the positive and negative poles are connected correctly. If the light is not on, it means that the positive and negative poles are connected incorrectly. Check whether the battery cell is normal on the charger screen after correctly connected. If the voltage is normal, then connecting the channel #2/3/4 in turn.

2) Then connect the connector end of temperature acquisition cable to the temperature port, and the probe end of temperature acquisition cable is connected to the corresponding battery packs.

3) And follow steps1) and 2) to connect the other wireless discharge module until all battery cells are connected.

4) If the cell voltage is unnormal during connection, you need to troubleshoot whether the cell or connecting wire is normal firstly.


Step6: Setting the equilibrium/discharge parameters to start the equilibrium/discharge test.

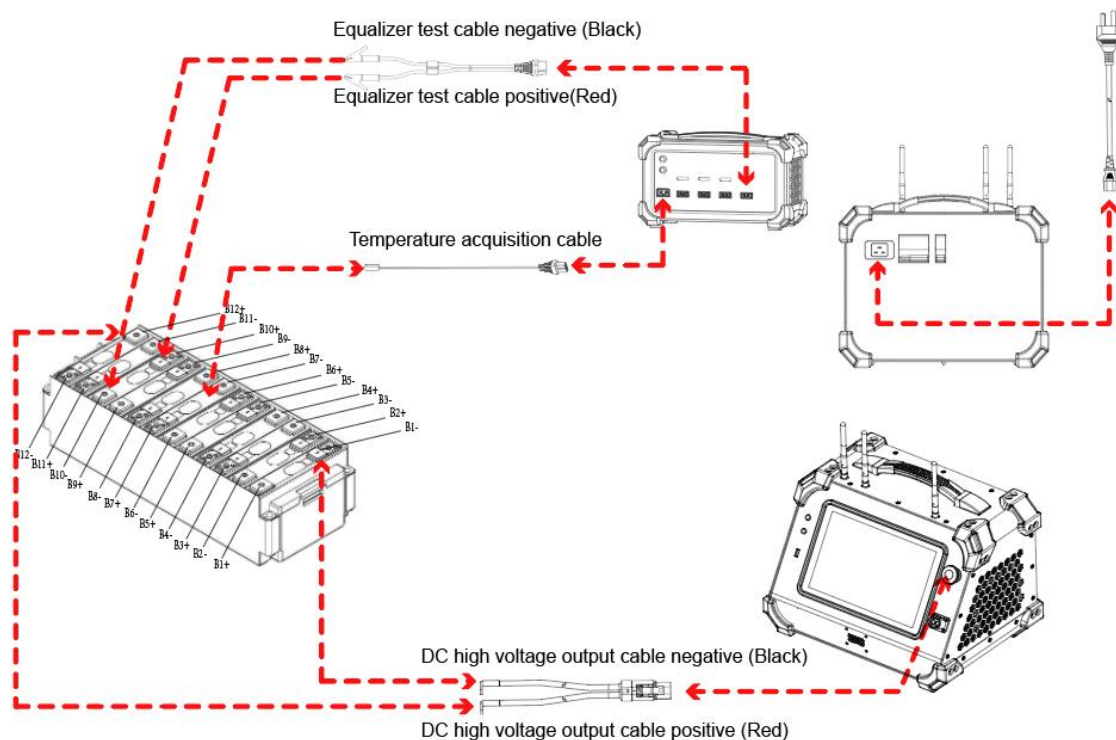

5.3 Main Unit Operation


5.3.1 Main Menu

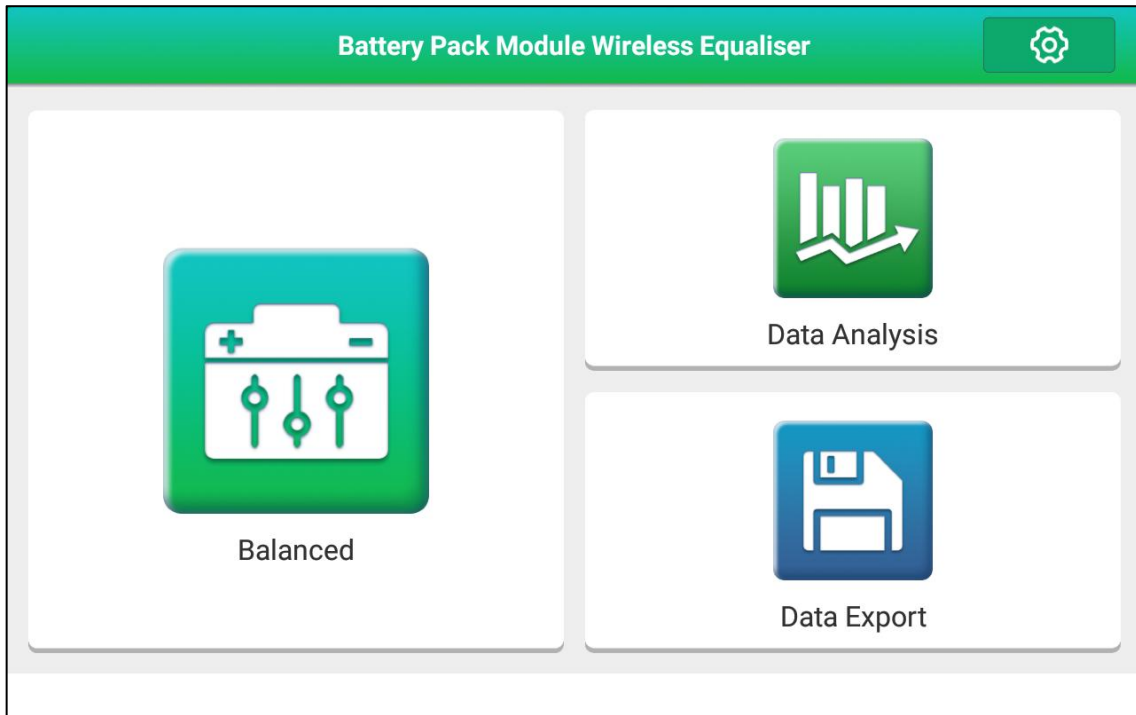

After charger is turned on, enter to the main interface. The main interface functions include Balanced, Data Analysis and Export Data.





5.3.2 Balanced Maintenance

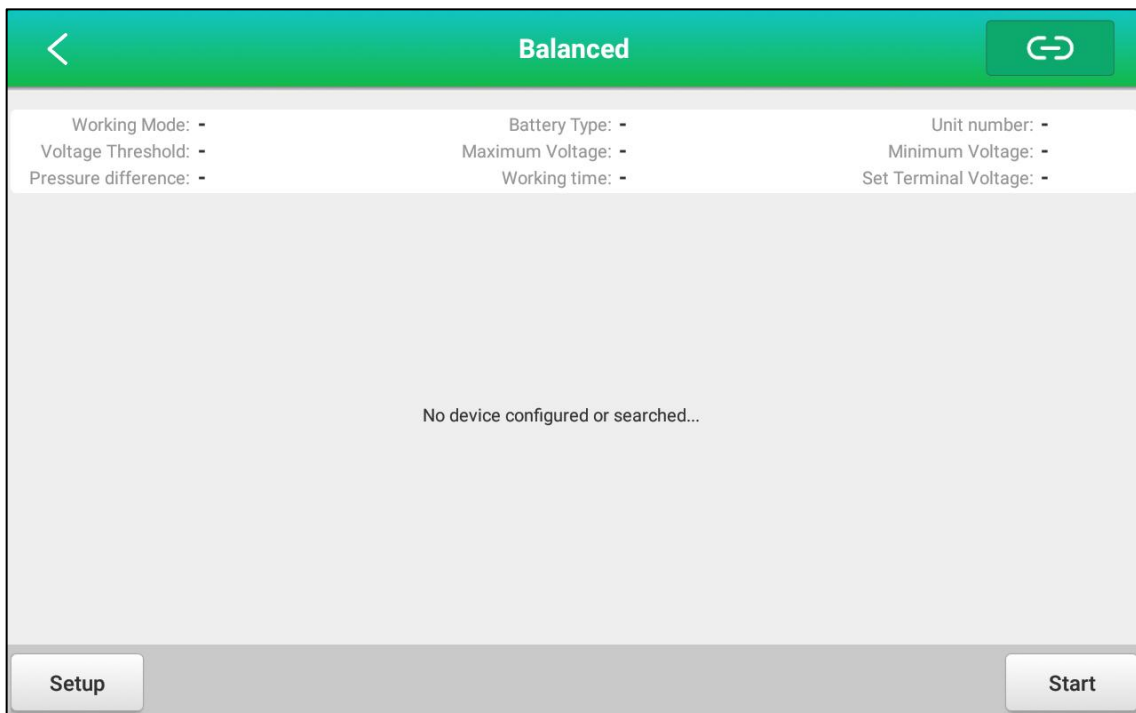
Click “Balanced” on main interface to enter Balanced interface.



Click “” button in the upper right corner of balanced interface to enter the device pairing interface, which can connect with optional devices. “” button in the upper right corner of device pairing interface is the clear device pairing button, which deletes all current devices when clicked. If you need to delete a single paired device, long press on the device serial number to delete the device.

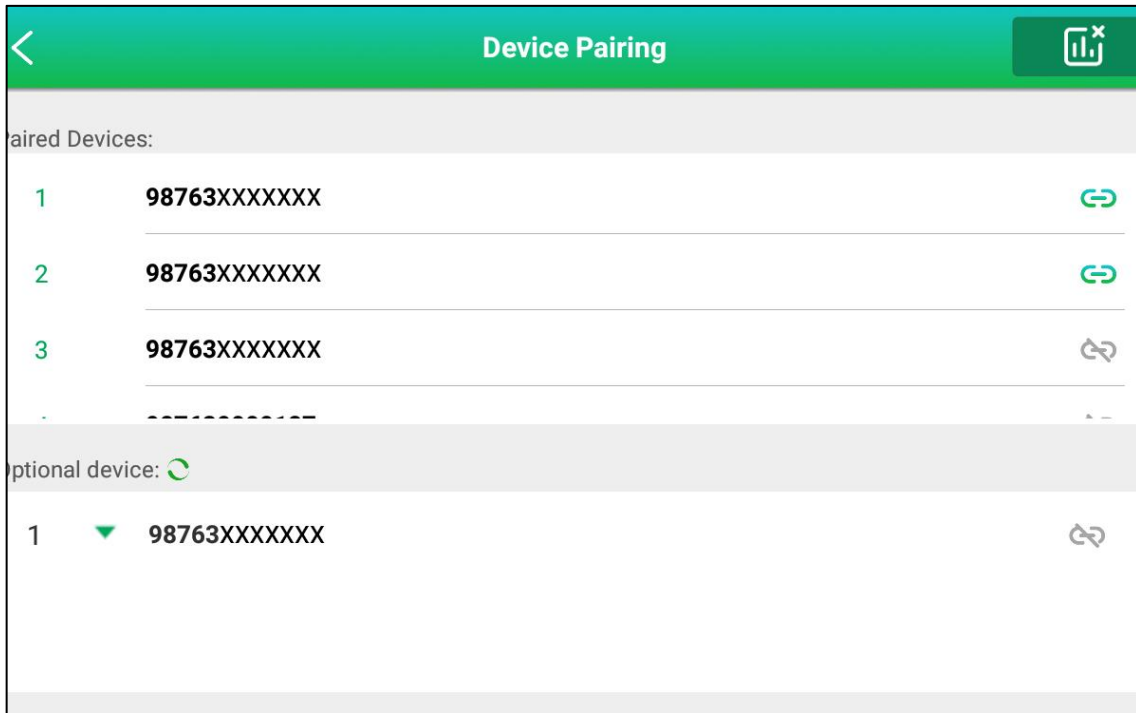

Click “” **Reback button** to enter the balanced interface after completing the device pairing, which displays the each channel of single battery’s information such as voltage, current, status, capacity and temperature at currently.

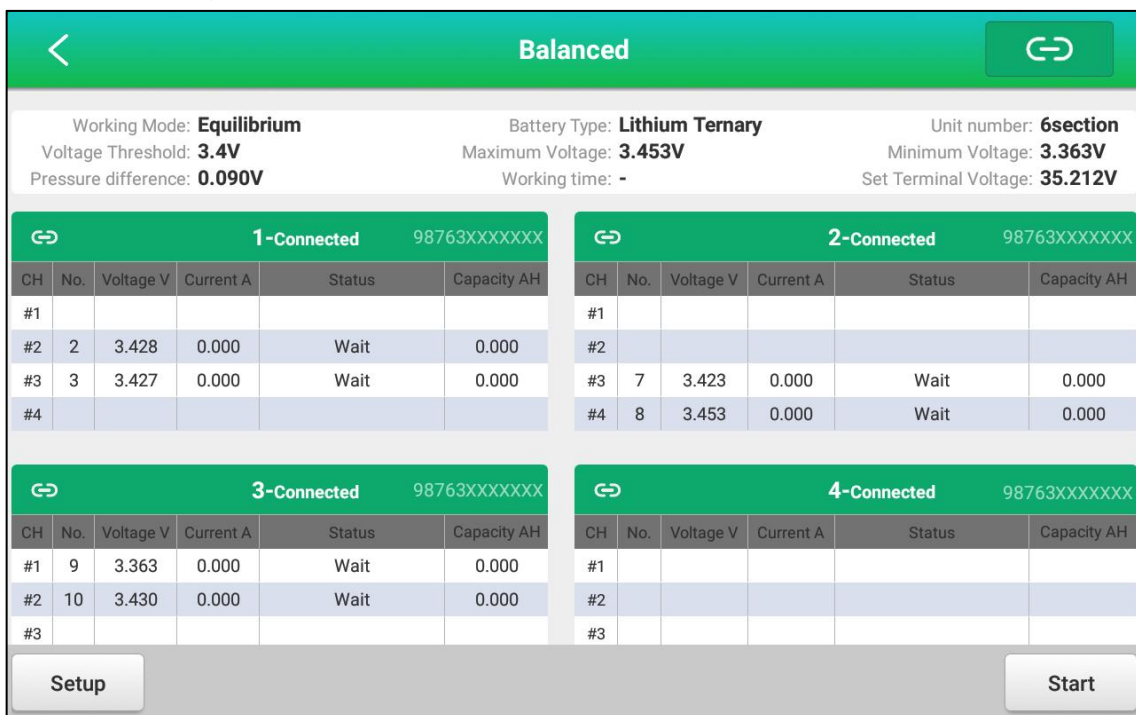


Click “**Setup**” to set parameter and tap “” to save the current parameter.

In addition, due to the unit end of charger does not participate in the discharge test process in discharge mode, number of cells does not need to be set.

Parameter Description :


No.	Name	Description
1	Module Name	Name the battery pack
2	Battery Type	Select actual battery type
3	Working Mode	Optional equilibrium, discharge and charge modes
4	Voltage threshold	Set target voltage value of equilibrium
5	Discharge Current	Set discharge current value
6	Number of discharged cells	Actual equilibrium channel number
7	Number of cells	Total number of cell s in battery modules
8	Temperature monitoring	Monitor real-time cell temperature after turned on


Click **“Start”** button to enter balanced interface which displays real-time information of each channel such as voltage, current, status, discharge capacity, etc. Then wait for working mode to complete. During working mode, tap **“Stop”** to end working mode.

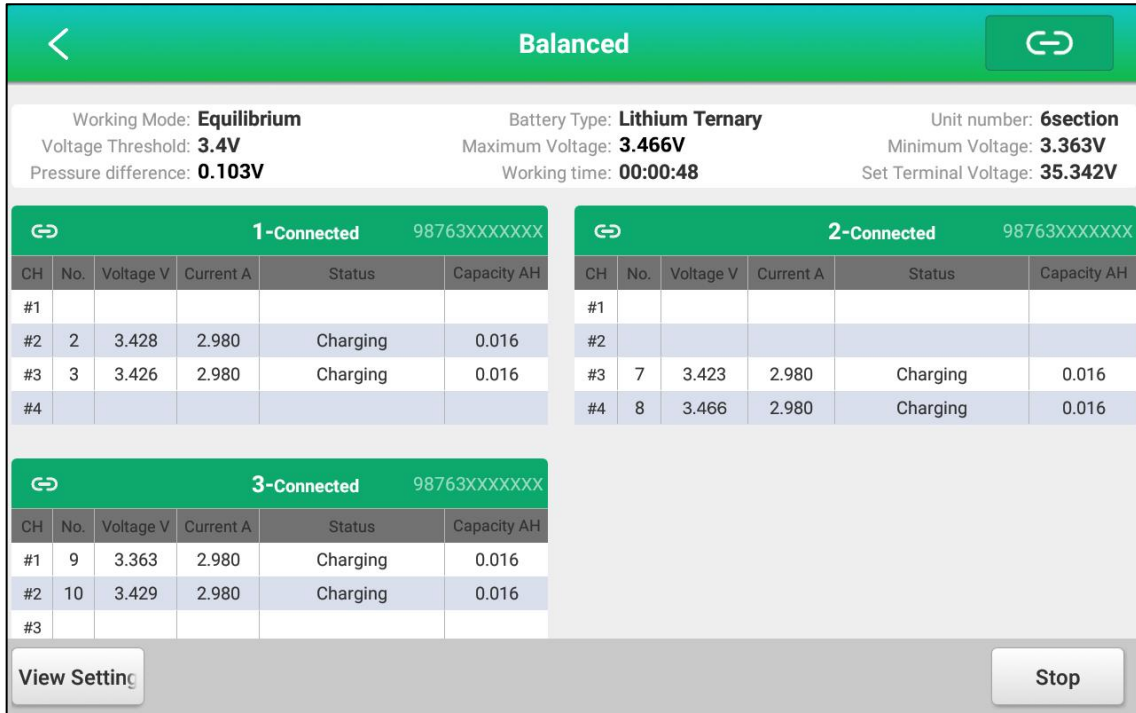

5.3.3 Data Analysis


Click **“Data Analysis”** on the main interface to enter the data analysis interface, which supports Column Chart and Curve Chart. Click **“▶”** button to review the data during the test.

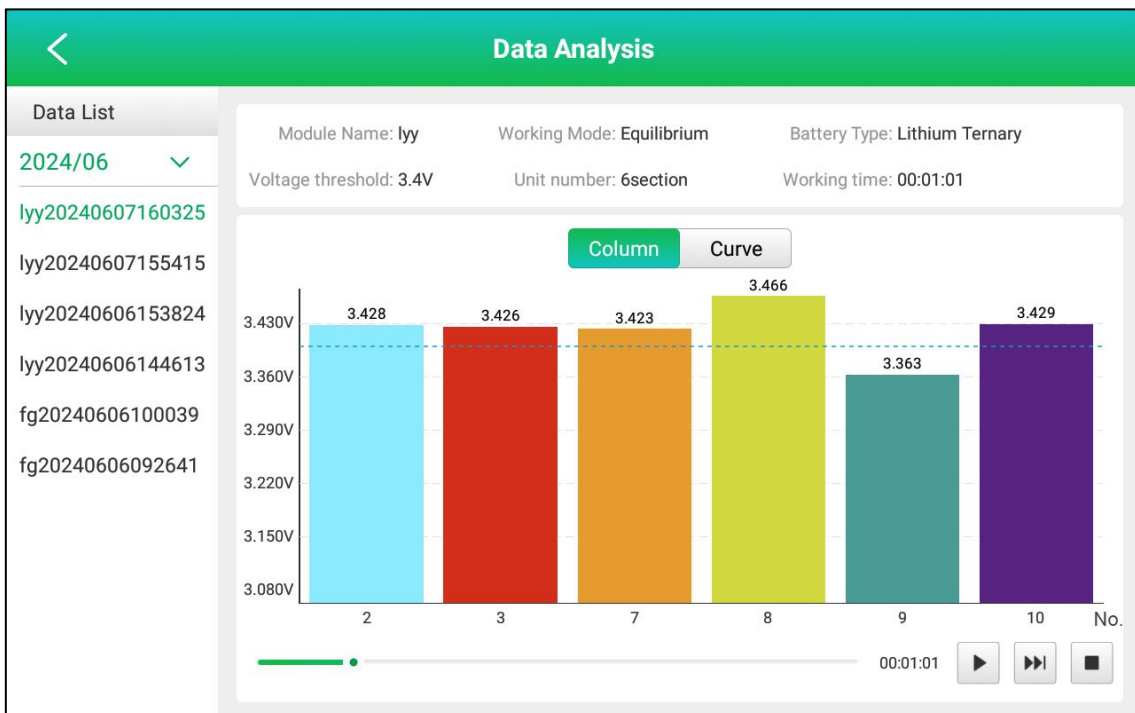

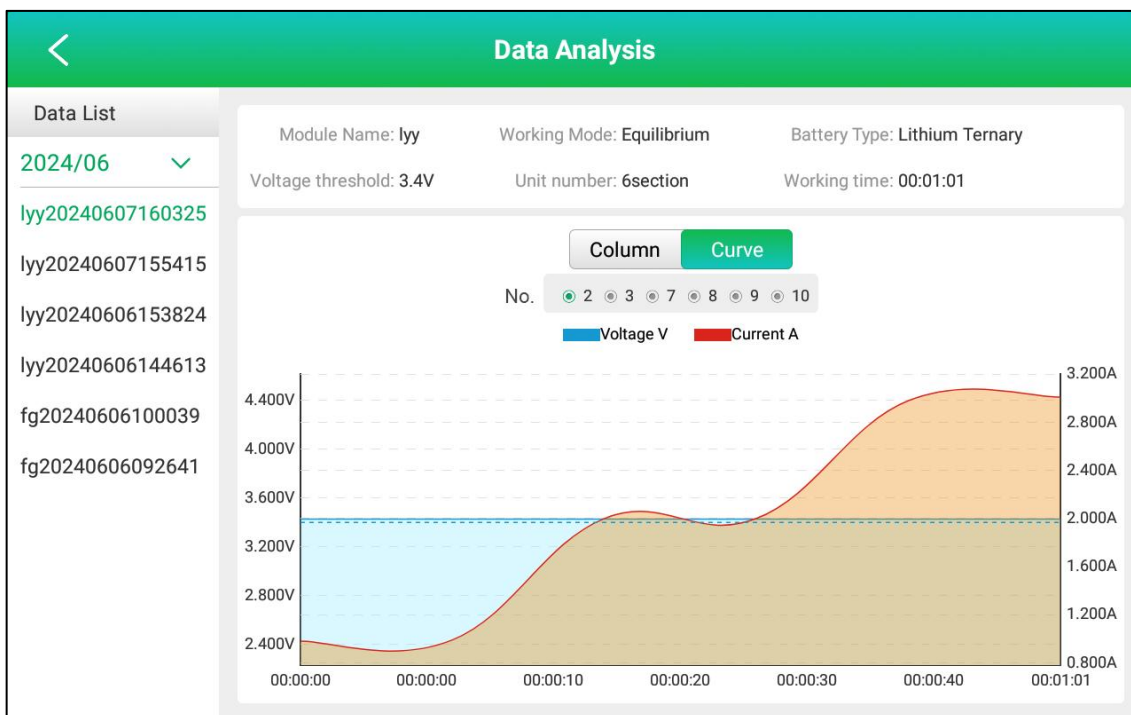


5.3.4 Data Export

Click **"Data Export"** on the main interface to enter the data export interface, select a battery pack in the data list, insert the U disk into the I/O port on the panel, and click **"Export to USB"** to transfer the historical data of discharge and charge to the U disk.

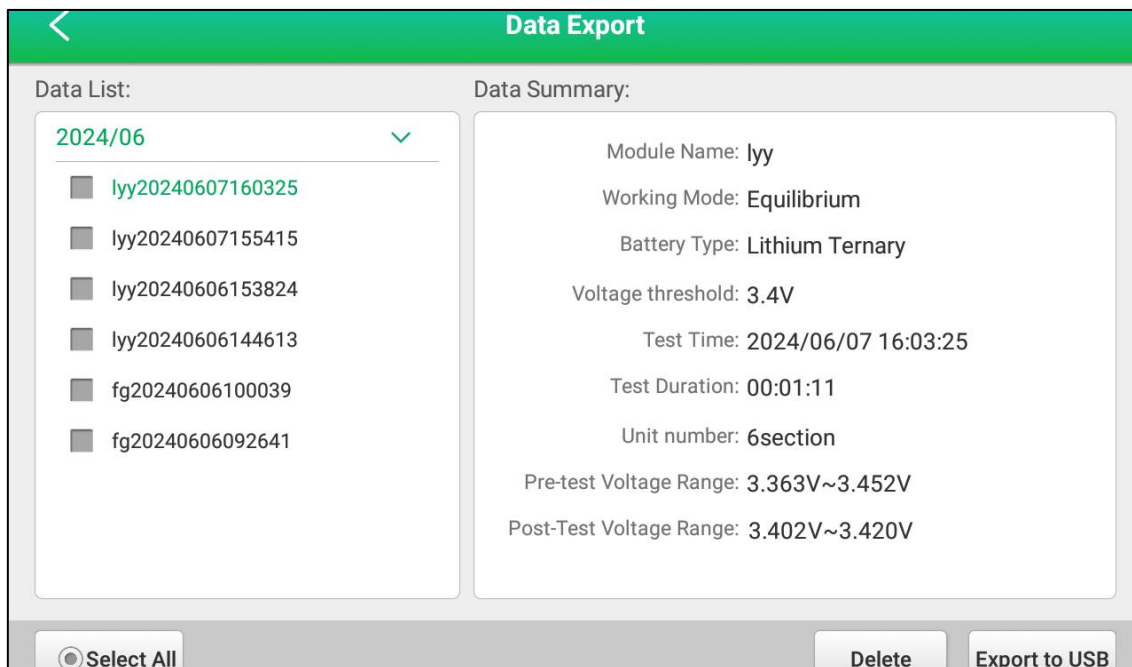


5.3.5 System Setting

Click “” button on the main interface to enter the system setup interface, which includes Wi-Fi connection, Bluetooth, Data&Time, Language Setting, Data Storage Interval, Software Upgrade and About.




Wi-Fi: Used to connect to Wi-Fi and check the IP address.

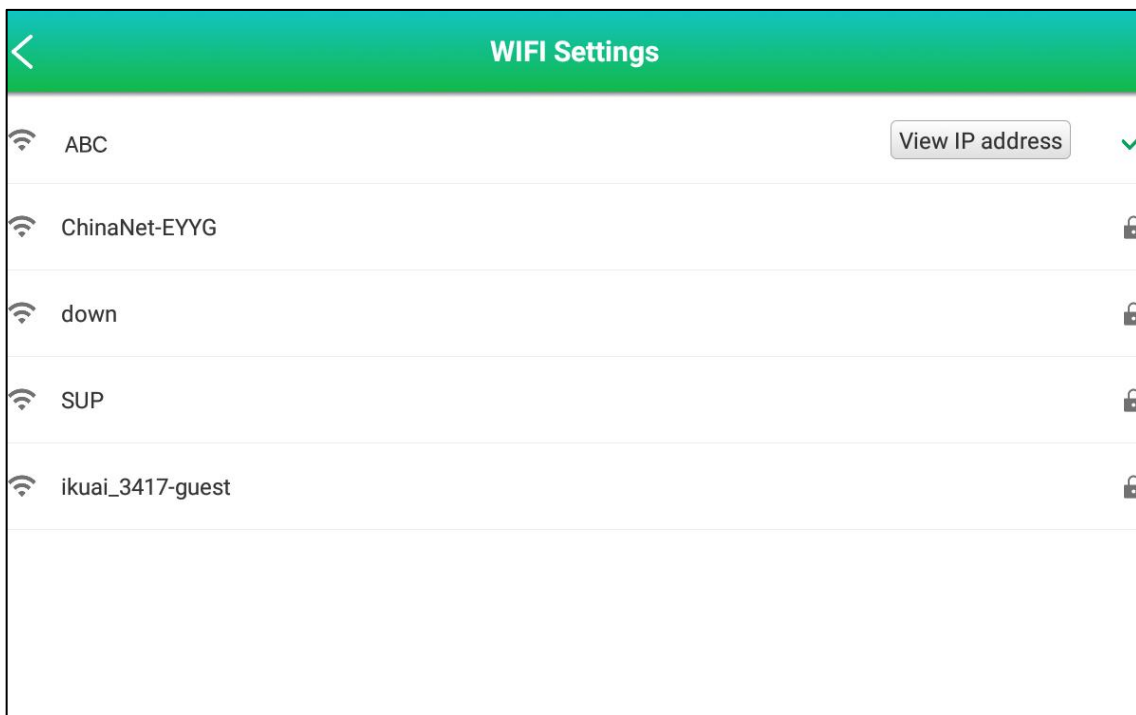

Bluetooth: Open or close the bluetooth.



Data & Time: Used to set data and time.

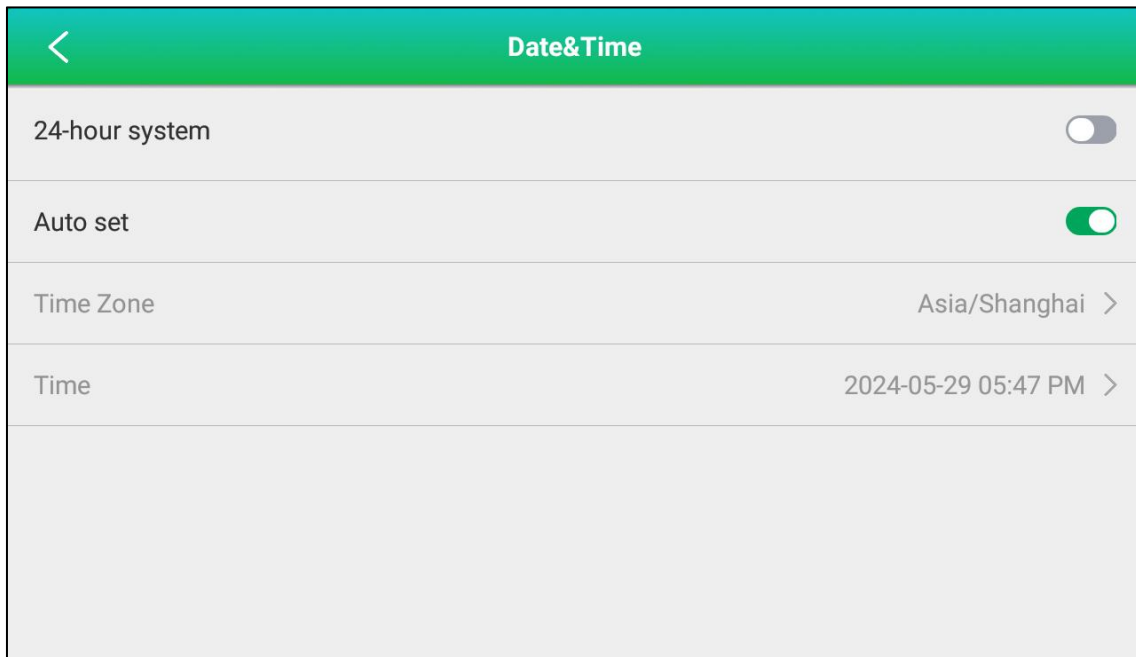


Language Setting : Used to select language.

< Language Setting	
繁體中文	<input type="radio"/>
English	<input checked="" type="radio"/>
Deutsch	<input type="radio"/>
Français	<input type="radio"/>
日本語	<input type="radio"/>
Español	<input type="radio"/>
Português	<input type="radio"/>
Italiano	<input type="radio"/>

Data Storage Interval : Used to set the data storage interval.

< Data Storage Interval	
10s	<input checked="" type="radio"/>
20s	<input type="radio"/>
30s	<input type="radio"/>

Software Upgrade: Used for software upgrade, including App upgrade and Firmware upgrade.

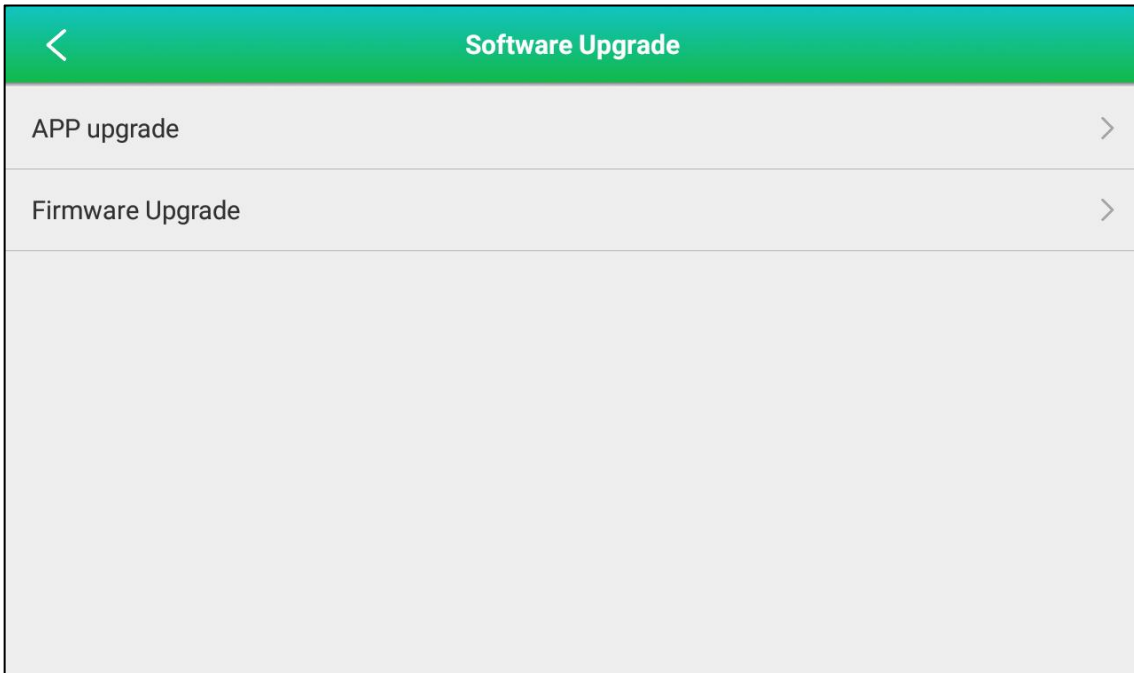

1. Tap **“APP Upgrade”**, you can be upgraded online by connecting to Wi-Fi or locally by inserting a USB stick.
 2. Tap **“Firmware Upgrade”**, you can be upgraded online by connecting to Wi-Fi or locally by inserting a USB stick.
- 1) Enter to “Firmware Upgrade” interface that displays the serial number of discharge module and the current firmware version of balanced channel. Equalizer channel #1 and equalizer channels #2, #3 and #4 of each discharge module may be different and their firmware versions may be different.

The screenshot shows a mobile application interface titled "System Setup". It features a green header with a back arrow on the left and the title "System Setup" in white. Below the header, there are two buttons: "Refresh server version" and "Refresh local version". Below the buttons is a table with four columns: "Edit", "Serial number", "Current Version", and "Description". The table contains six rows of data, each with a radio button in the "Edit" column. The "Serial number" column shows alternating entries for "#1" and "#2/#3/#4". The "Current Version" column shows alternating entries for "1.0.6" and "1.0.2". The "Description" column shows "It is already the latest version" for all entries.

Edit	Serial number	Current Version	Description
<input type="radio"/>	98763XXXXXX-#1	1.0.6	It is already the latest version
<input type="radio"/>	98763XXXXXX-#2/#3/#4	1.0.2	It is already the latest version
<input type="radio"/>	98763XXXXXX-#1	1.0.6	It is already the latest version
<input type="radio"/>	98763XXXXXX-#2/#3/#4	1.0.2	It is already the latest version
<input type="radio"/>	98763XXXXXX-#1	1.0.6	It is already the latest version
<input type="radio"/>	98763XXXXXX-#2/#3/#4	1.0.2	It is already the latest version

About: Used to view device model,APP version, system update, etc.

About	
Device Model	EVB624
APP Version	V1.0.22
Device Serial Number	98761XXXXXXX
Latest Firmware Version (#1)	V1.0.6
Latest Firmware Version (#2/#3/#4)	V1.0.2
System update	V1.2.2 >
Copyright © 2024 cnlaunch. All Rights Reserved.	

Warranty

This warranty applies only to users and distributors who have purchased Launch's products through regular procedures.

Launch shall provide a warranty against material or craftsmanship defects for 15 months from the date of delivery on its electronic products. Damages to the device or its components caused by abuses, unauthorized modifications, uses for a purpose other than for which it is intended, or operations not following the manner specified in the manual, etc. are not covered by this warranty. Compensation for the damage to instrument of the automobile due to the defect of the device is limited to repair or replacement, Launch is not responsible for any indirect or accidental loss. Launch will judge the attributes of the equipment damage according to its specified test method. None of Launch's dealers, employees and business representatives has the authority to make any confirmations, reminders or promises related to the company's products.

Disclaimer Statement

The above warranty can substitute warranties in any other forms.

Order Notice

Replaceable and optional parts can be ordered directly from LAUNCH authorized distributors. Your order should include the following information:

Order quantity

Part number

Part name

Customer Service Center

For any problem met during the operation, please call +86-0755-84528767, or send email to overseas.service@cnlaunch.com.

If the device needs to be repaired, please send it back to Launch, and attach the Warranty Card, Product Qualification Certificate, Purchase Invoice and problem description. Launch will maintain and repair the device for free when it is within warranty period. If it is out of warranty, Launch will charge the repair cost and return freight.

Launch Address:

Launch Tech Co., Ltd, Launch Industrial Park, North of Wuhe Road, Bantian Street, Longgang District, Shenzhen City, Guangdong Province, P.R.China,
Zip Code: 518129

Launch Website: <https://www.cnlaunch.com>

Statement:

LAUNCH reserves the rights to make any change to product designs and specifications without notice. The actual object may differ a little from the descriptions in the manual in physical appearance, color and configuration. We have tried our best to make the descriptions and illustrations in the manual as accurate as possible, and defects are inevitable, if you have any question, please contact local dealer or after-sale service center of LAUNCH, LAUNCH does not bear any responsibility arising from misunderstandings.